


GAZEBO ASSEMBLY INSTRUCTIONS

IMPORTANT

- THIS GAZEBO MUST BE ASSEMBLED BY AT LEAST TWO PEOPLE
- DO NOT USE FORCE. IF THE GAZEBO IS NOT ERECTING EASILY, GO BACK AND REVIEW EACH STEP

Step 1.

STAND GAZEBO UPRIGHT ON ITS LEGS. PULL THE 4 CORNER UPRIGHTS OUTWARDS SLOWLY UNIT HALF EXTENDED. CHECK THAT THE ROOF CANOPY FABRIC IS NOT CAUGHT THEN PULL THE CORNER UPRIGHTS INTO THEIR FULL POSITION.

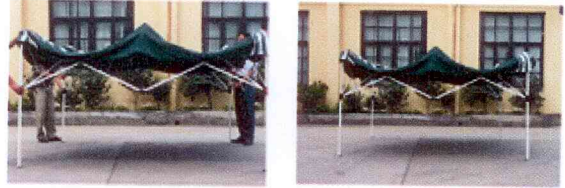

Step 2.

ONE CORNER AT A TIME, FIX THE FRAME INTO POSITION BY MOVING THE BLACK SLIDING ASSEMBLY INTO ITS "CLIP-LOCK" POSITION AT THE TOP OF EACH CORNER UPRIGHT. SUPPORT SHOULD BE GIVEN TO THE ROOF APEX POLES TO ENSURE THAT THEY ARE POSITIONED CORRECTLY.



Step 3.

TO RAISE THE ROOF HEIGHT, EXTEND THE CORNER UPRIGHTS INTO POSITION LIFTING EVENLY WITH YOUR FOOT HOLDING THE UPRIGHT BASE PLATE UNTIL THE LEGS LOCK INTO THE EXTENDED POSITION.



Step 4.

PULL THE FABRIC ROOF INTO POSITION SO THAT IT FITS TIGHTLY AT THE CORNERS AND SECURE THE METAL "ROOF CLIPS" INTO ONE OF THE HOLES PROVIDED AT THE BOTTOM OF EACH UPRIGHT. SECURE VELCRO TIES [INSIDE ROOF CANOPY] TO GAZEBO FRAME



Step 5.

SECURE ALL CORNERS OF THE GAZEBO BY USING THE PEGS AND GUIDE ROPES PROVIDED ATTACH THE GUIDE ROPES TO THE ROOF FABRIC AT THE TOP OF EACH CORNER UPRIGHT AND PEG SECURELY INTO THE GROUND. PEGS ARE ALSO PROVIDED TO "PEG-DOWN" EACH CORNER UPRIGHT BASE PLATE.



IN THE UNLIKELY EVENT THAT ANY COMPONENTS ARE EITHER DAMAGED OR MISSING, PLEASE RETURN THE COMPLETE ITEM TO THE RETAIL OUTLET FROM WHERE IT WAS PURCHASED.

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

SOLUS LEISURE, DROITWICH, WORCESTERSHIRE WR9 9AB.

DISMANTLING INSTRUCTIONS

IMPORTANT


- THIS GAZEBO MUST BE DISMANTLED BY AT LEAST TWO ADULTS.
- DO NOT USE EXCESSIVE FORCE

- Step 1.** RELEASE GUIDE ROPES AND REMOVE PEGS FROM CORNER BASE PLATES. RELEASE VELCRO TIES. UNDO METAL ROOF CLIPS.



- Step 2.** LOWER THE HEIGHT BY PRESSING IN THE "CLIP LOCK" ON EACH UPRIGHT.

FOLD ROOF/CORNER FABRIC BACK INTO THE FRAME, ENSURING FABRIC IS NOT TRAPPED IN FOLDING MECHANISM

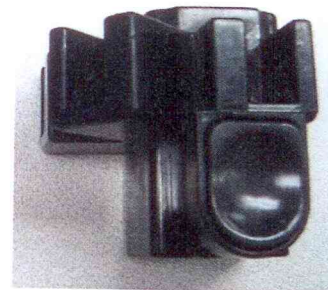

- Step 3.** IN EACH TOP CORNER SLIDE THE BLACK SLIDING ASSEMBLY DOWN THE UPRIGHT ALLOWING THE FRAME TO "FOLD IN" TOWARDS THE CENTRE. ENSURE THAT WHEN FOLDED IN, THE CANOPY DOES NOT CAUSE ANY PART OF THE FRAME TO TWIST. NO FORCE IS REQUIRED



WARNING: FIRE PRECAUTION

- DO NOT USE NAKED FLAMES IN OR NEAR THE GAZEBO
- THIS GAZEBO HAS NO FLAME RETARDANT COOKING AREA
- THIS GAZEBO MUST NOT BE LEFT ERECT IN WINDY CONDITIONS.
- THIS GAZEBO MUST BE COMPLETELY DRY BEFORE STORAGE
- THIS GAZEBO IS NOT TO BE USED AS A PERMANENT STRUCTURE AND SHOULD BE TAKEN DOWN AFTER USE